



CONSTRUCT WING DIRECTLY OVER PLAN

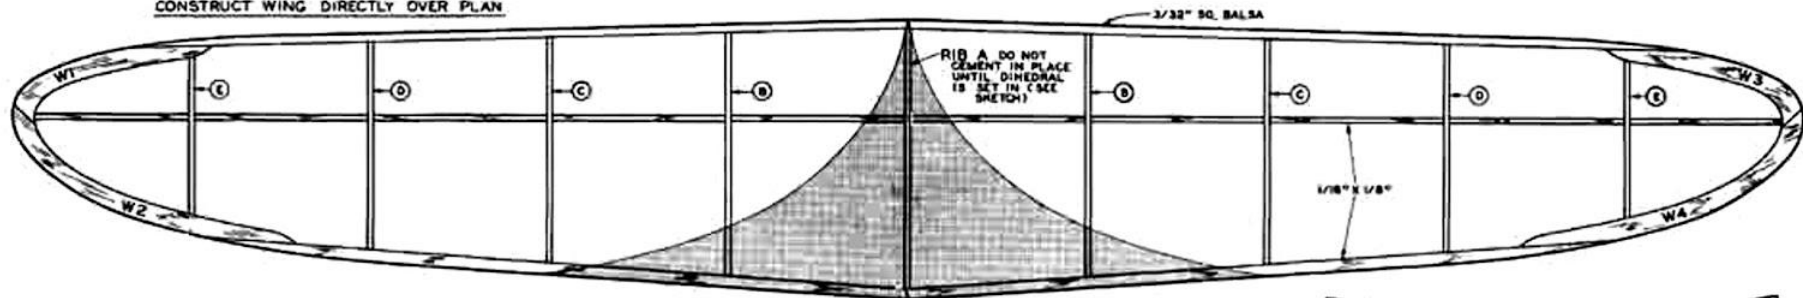

**HINTS ON COVERING MODEL**  
 USE CLEAR DOPE OR SAMANA LIQUID TO APPLY TISSUE.  
 STICK TISSUE TO OUTER EDGES OF SURFACES ONLY.  
 AFTER MODEL IS COVERED, SPRAY TISSUE LIGHTLY WITH WATER TO MAKE IT TAUT.  
 A GLOSSY FINISH CAN BE OBTAINED BY GIVING COVERED MODEL A FEW COATS OF CLEAR DOPE.



NOTE - MISSING PRINTWOOD - IF ANYONE HAS THE COMPLETE KIT AND WOULD BE WILLING TO LEND IT TO US - CONTACT THE ADDRESS SHOWN ABOVE - THANKS

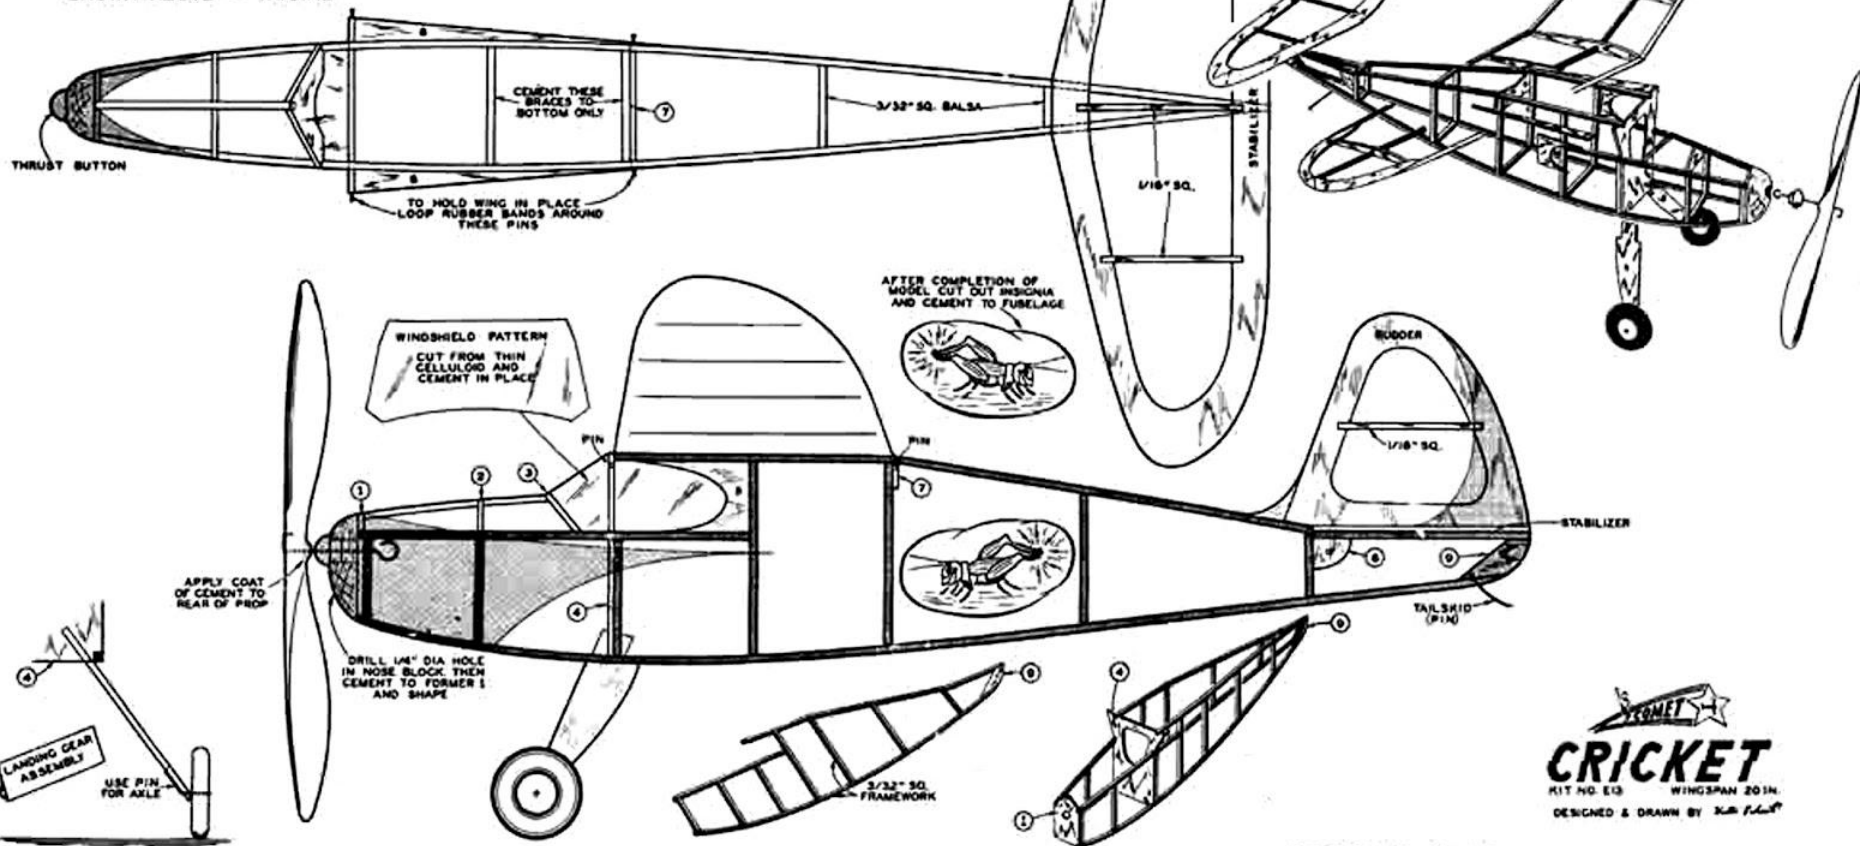

WINDSHIELD PATTERN  
 CUT FROM THIN CELLULOSE AND CEMENT IN PLACE

AFTER COMPLETION OF MODEL CUT OUT INSIGNIA AND CEMENT TO FUSELAGE

APPLY COAT OF CEMENT TO REAR OF PROP

DRILL 1/16" DIA HOLE IN NOSE BLOCK THEN CEMENT TO FORMER 1 AND SHAPE

LANDING GEAR ASSEMBLY

USE PIN FOR AXLE

**COMET**  
**CRICKET**  
 KIT NO. E13 WINGSPAN 20 IN.  
 DESIGNED & DRAWN BY K. H. PETERSON

1947 COMET MODEL AIRPLANE