


3/32 50 STRINGERS

ADD THE REMAINING  
SPACERS PUT IN FORMERS,  
LANDING GEAR & WINDOW  
OUTLINES

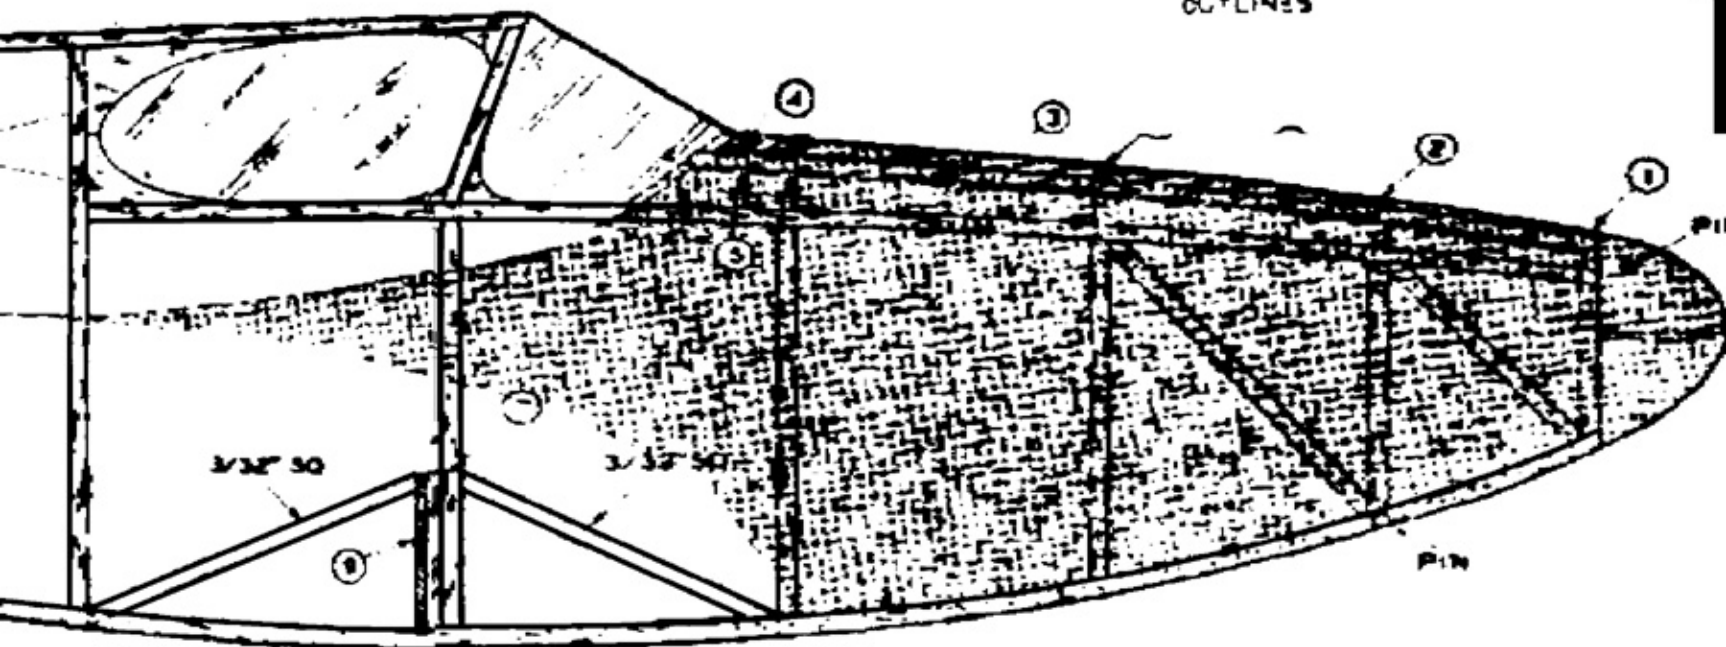

3/32 50

3/32 50

LANDING GEAR

PIN