


BUILD THE FUSELAGE BOX UPSIDE DOWN USING 1/16 SQ CROSS MEMBERS THAT CAN BE REMOVED LATER AFTER ADDING FORMERS.

VERTICAL STAB T.E. 1/8X1/16 Balsa STRIPS

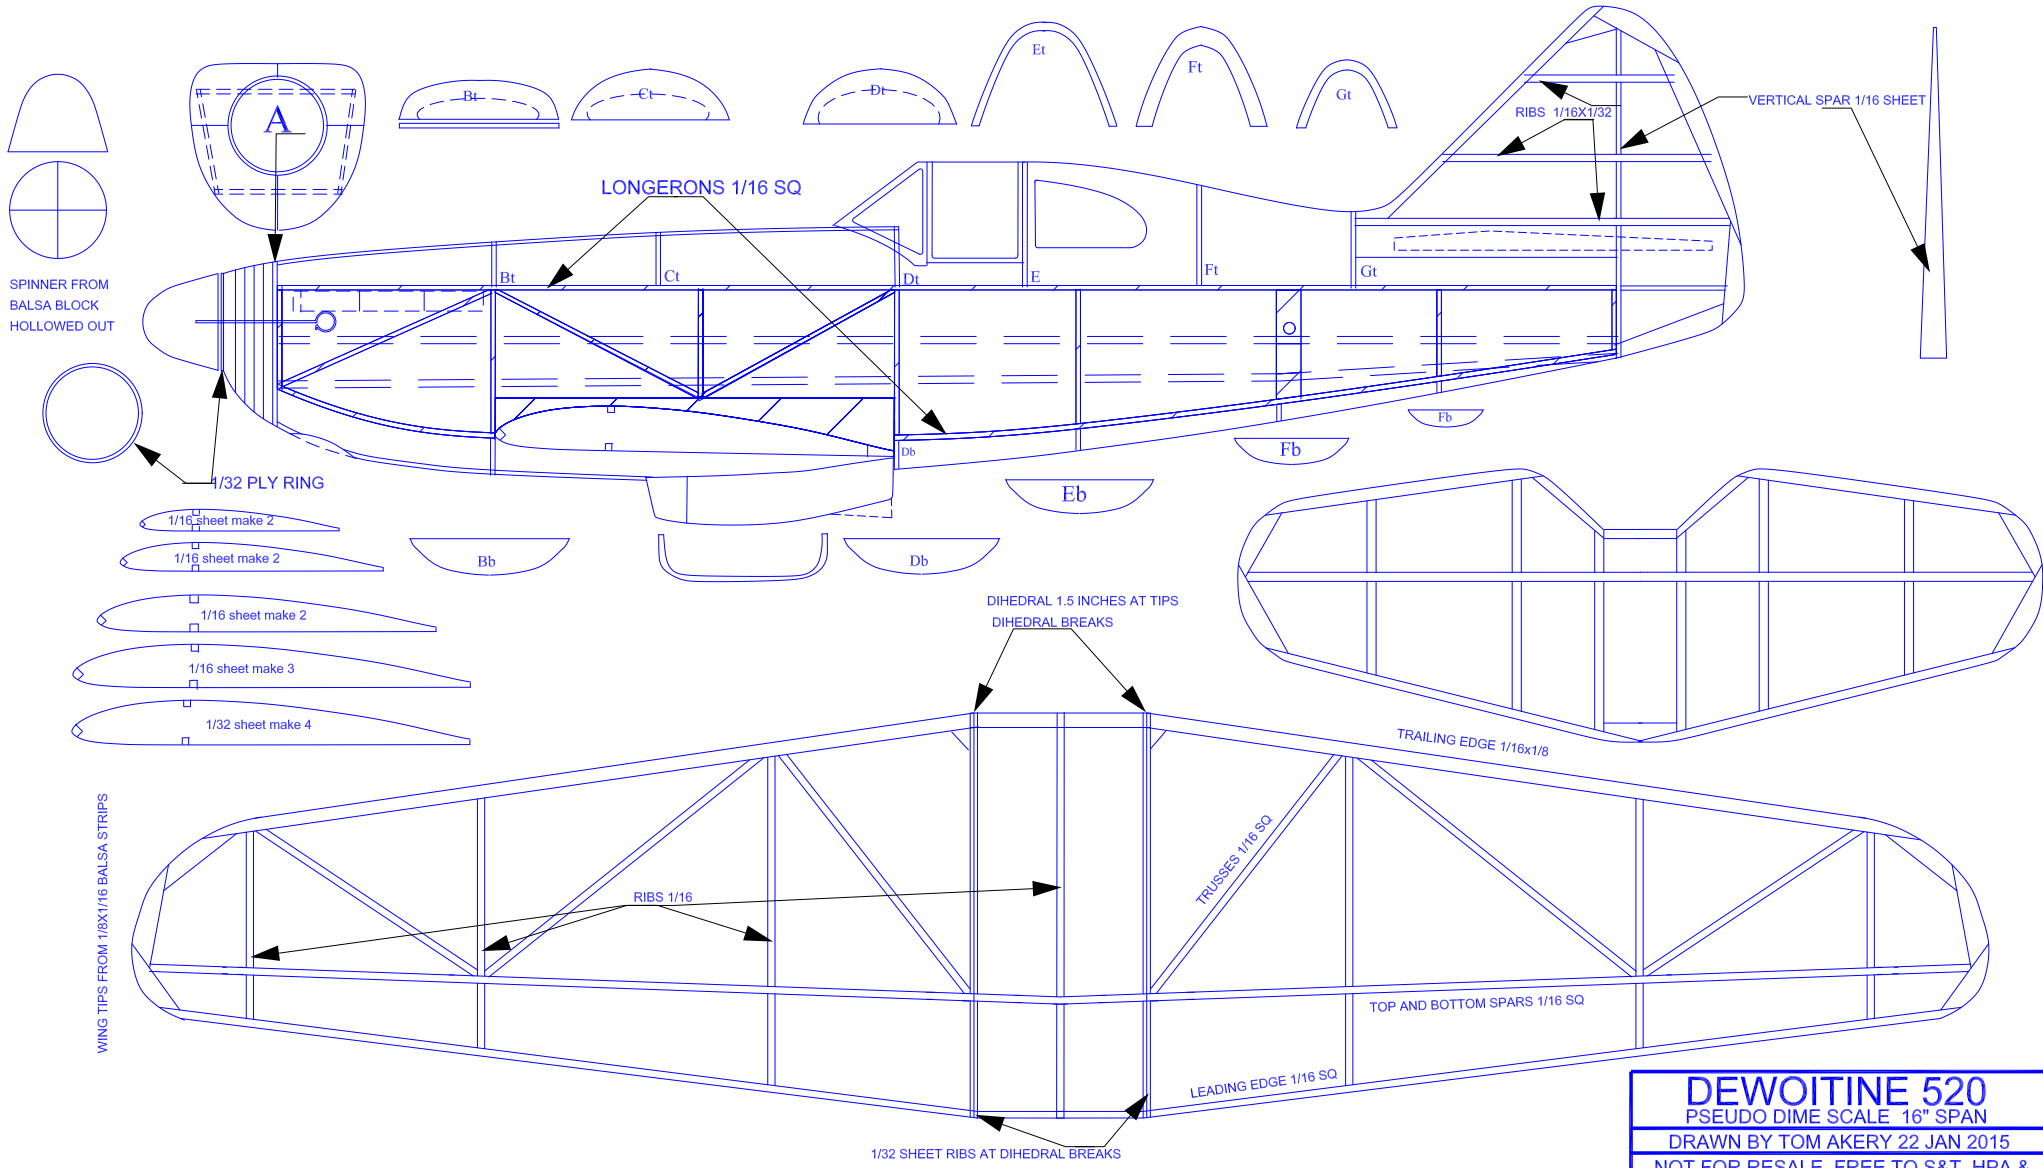

DEWOITINE 520
PSEUDO DIME SCALE 16" SPAN
DRAWN BY TOM AKERY 22 JAN 2015
NOT FOR RESALE FREE TO S&T, HPA & SFA MEMBERS