

USE TO LOCATE PLAIN SHEETS TOGETHER.

*COWL STRINGERS 1/16"

SOFT BALSA BLOCK, 1/2" x 1" x 1/8" SAND TO SHAPE

*ALL LONGERONS AND UPRIGHTS 3/32 SQUARE
*TOP STRINGERS 1/8"
*BOTTOM STRINGERS 3/32"




* FINE TUNE THRUST ANGLES WITH SHIMS BEHIND MOTOR PLATE.

* FINE FLEW QUITE FINE ON ONE LOOP OF 3/16" AND ONE LOOP OF 1/8" TRY WHAT YOU LIKE (6" PROP)

* NOTE COWL FLARE AT BOTTOM.

* DO NOT GLUE STRUTS FOR FLOAT GEAR OR WHEELED GEAR INTO LOCATING TUBES. THE GEAR IS MEANT TO BE INTERCHANGEABLE AND SHOULD FALL OUT SLIGHTLY ON NOT SO GOOD LANDINGS.

* GLUE STAB AT REAR ONLY. LEADING EDGE CAN BE SHIMMED AS NEEDED. * STAB MUST BE INSTALLED ON FUSE BEFORE TOP FUSE STRINGERS ARE GLUED AND SOLID AND FIN SPACER GLUED ON.

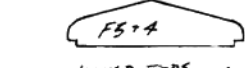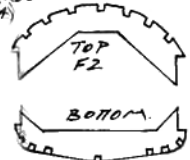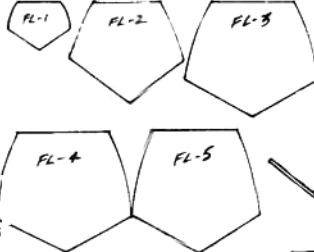

APP. W/SCREEN TEMPLATE

RIB PROFILE
LEADER STRUT STEEPENER (CRIBS)
SPAR JOINER (4 RIBS ONLY)

3/32" x 5/16" WING STRUT 8 5/16" ADJUST TO FIT HAND TO PROFILE

BAMBOO SLIVER LOCATING PIN

TOP STRUTS SET BACK 1/16"

FIN SUPPORT 1/16"

GEAR RECEPTOR W/ 1/16" TUBE

BEND + GLUE CENTER ONLY!

MAGNET

MAGNET

1/16" STRUT MOUNT.

3/32" FRAME

CONSTRUCT FLOATS AS YOU SEE FIT TISSUE COVERED, FOAM, 1/32 SHEET

DHC-2 BEAVER
 DENAVILLAND AIRCRAFT OF CANADA

SCALE: 1/10 KNOWLES	APPROVED BY: G/SPAN-22"	DRAWN BY: O.D.
DATE: SEPT 08	LENGTH - 14"	REVISED
DOUG, DORRYN - OTHERWISE KNOWN AS HERMIT. (WITH A LOT OF HELP FROM HIS FRIENDS).		
DRAWING NUMBER		