




ALTERNATE ROTOR HUB

Turn 3/4" dia. by 1/2" deep cone from hard balsa in place of forming cone from alum. Before turning, drill 1/16" hole thru for alum. tube bearing. Secure parts with epoxy or ACC.

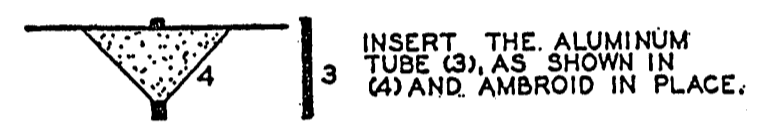

ALTERNATE TIP

Laminate 4 1/64x1/16 or 2 1/32x1/16 strips of balsa around form cut to shape of curved areas.

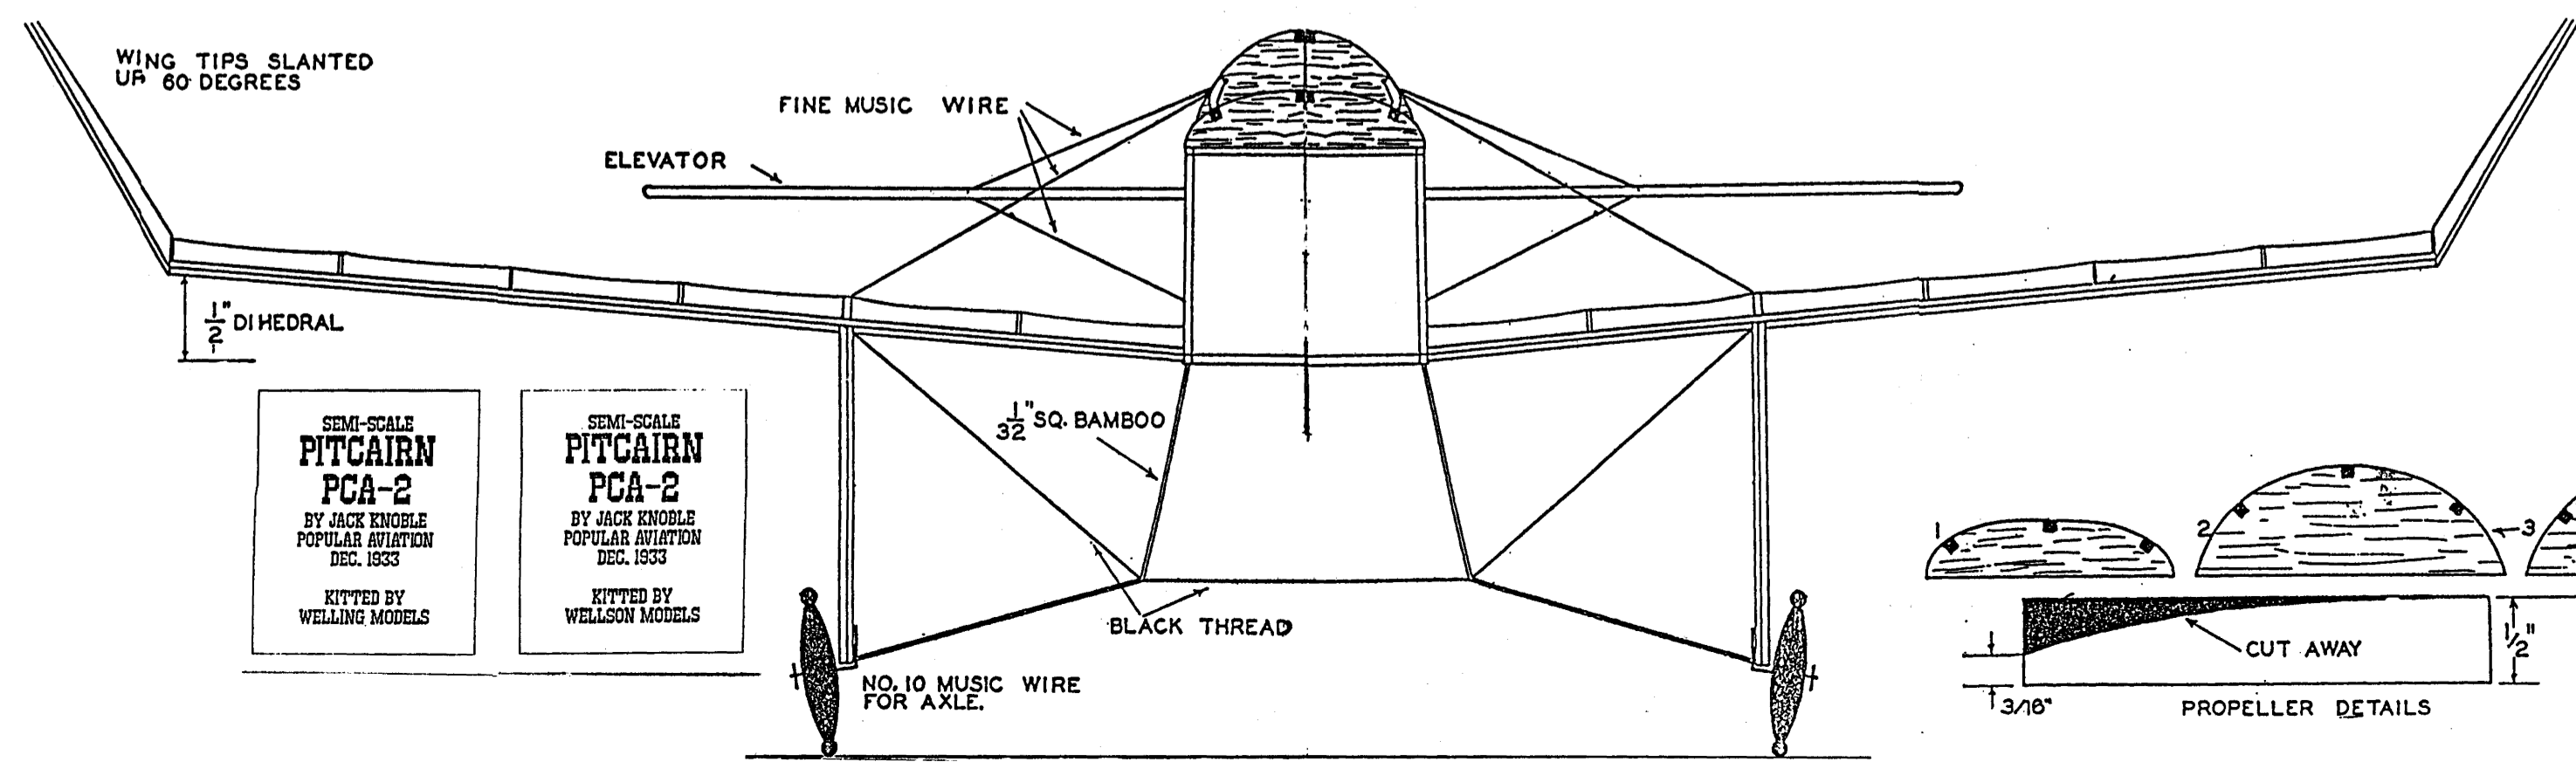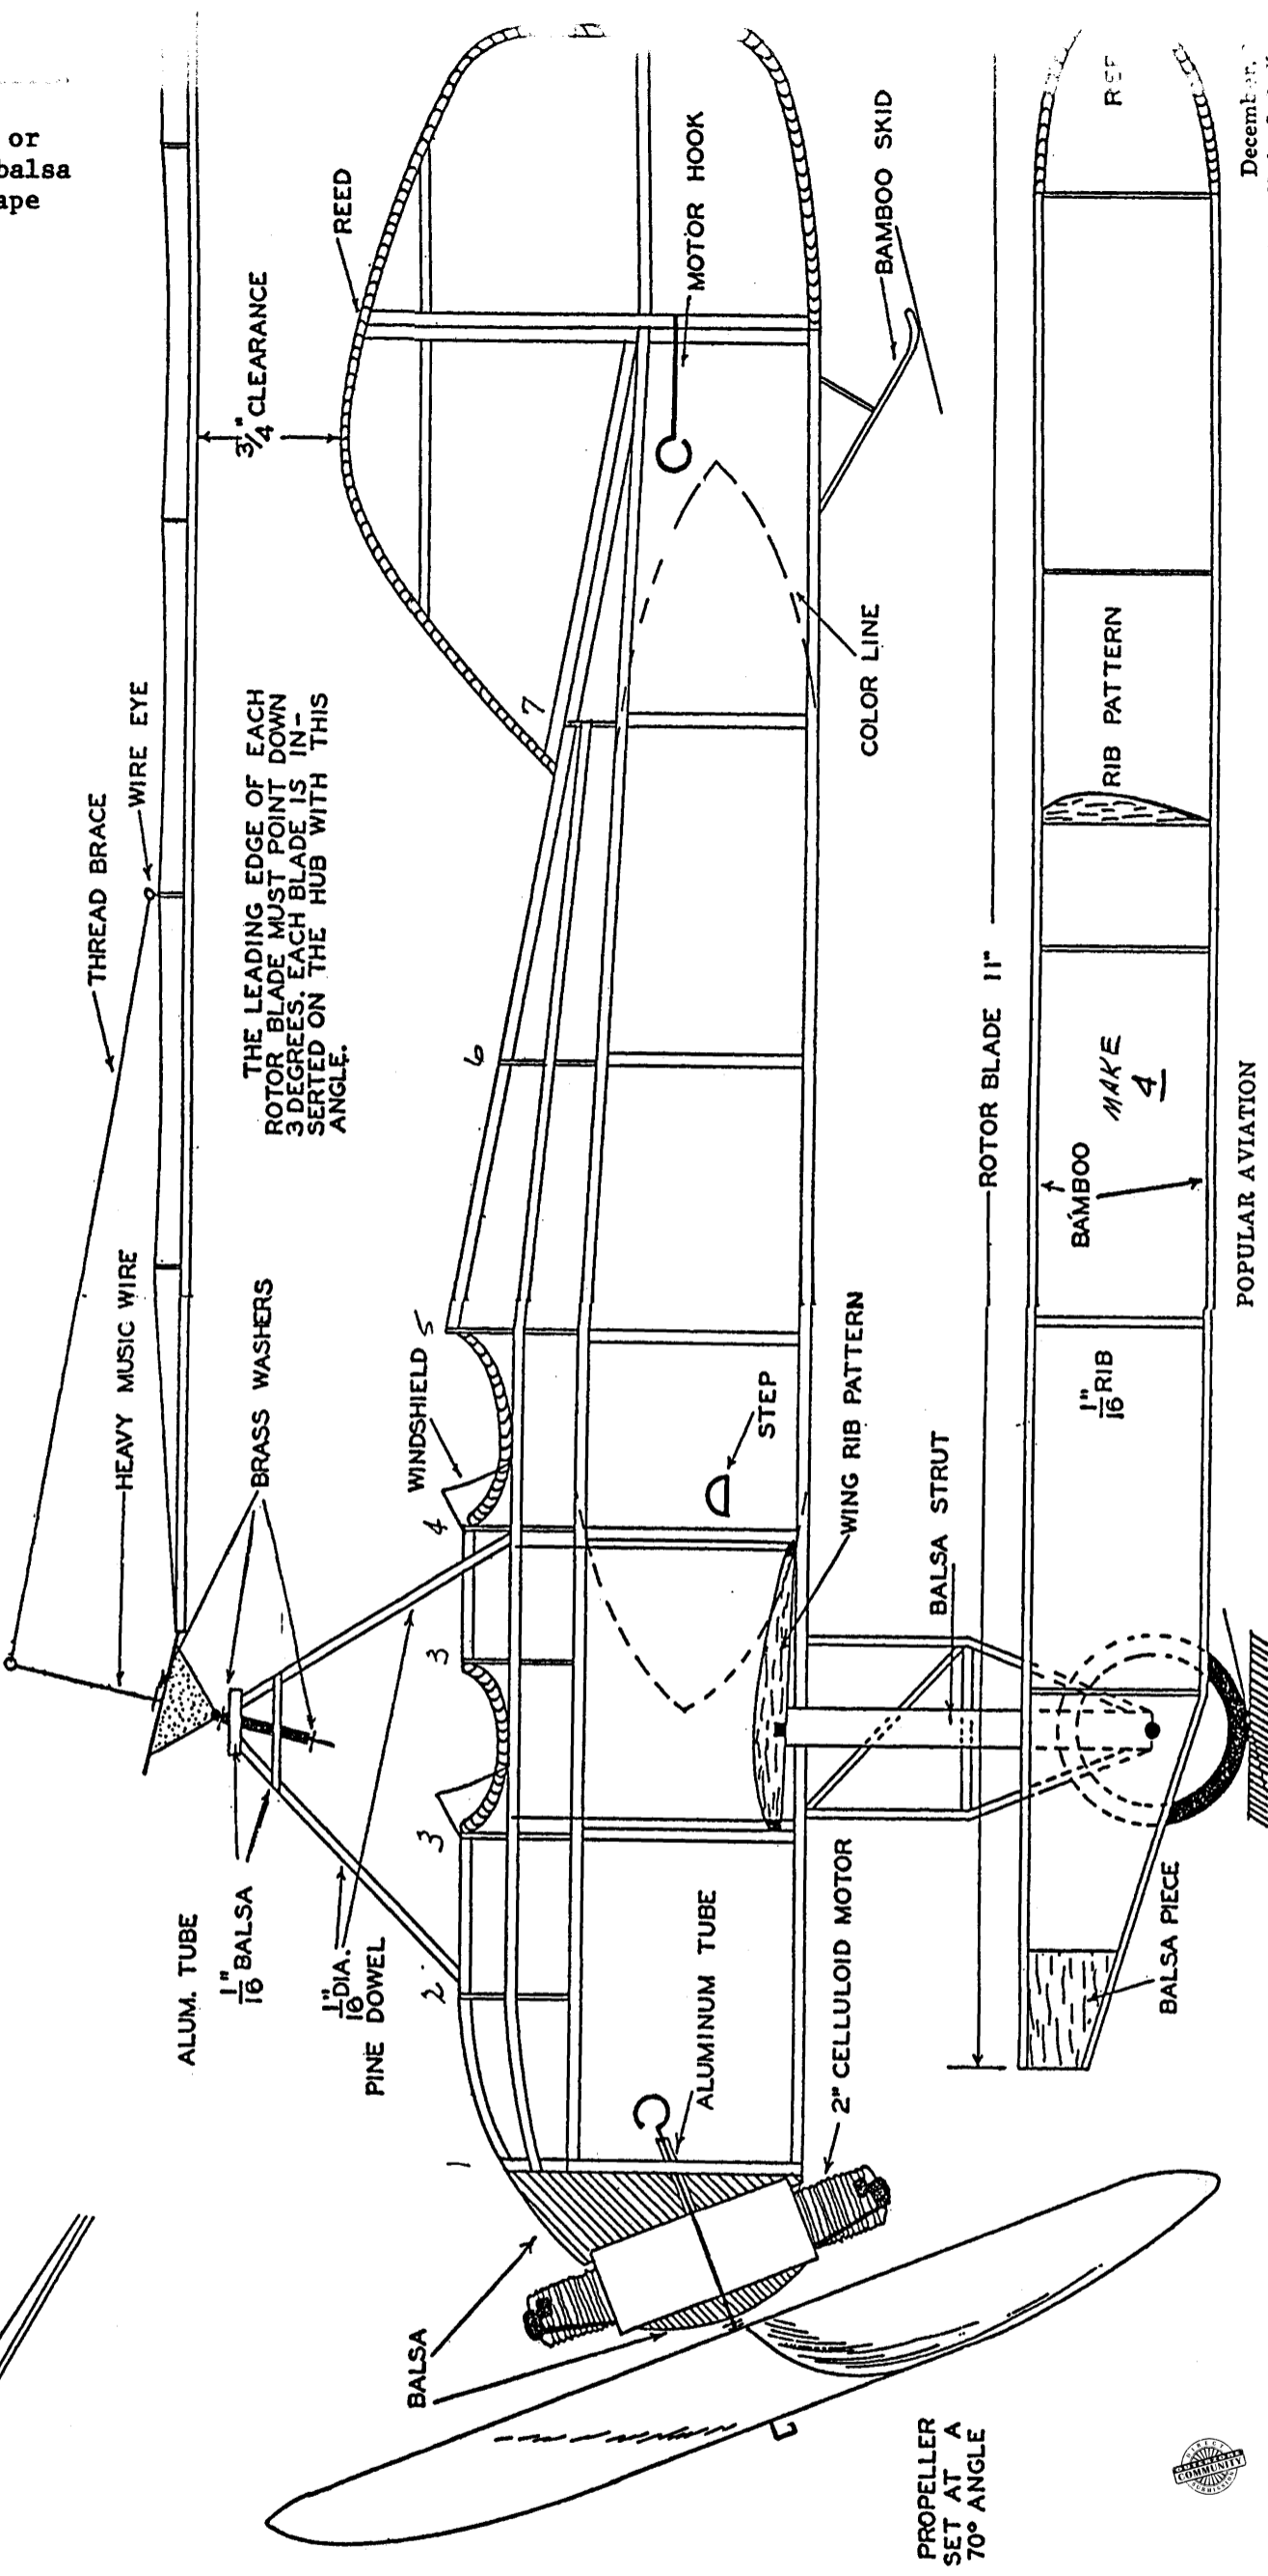

SEMI-SCALE
PITCAIRN PCA-2
BY JACK KNOBLE
POPULAR AVIATION
DEC. 1933
KITTED BY
WELLING MODELS

SEMI-SCALE
PITCAIRN PCA-2
BY JACK KNOBLE
POPULAR AVIATION
DEC. 1933
KITTED BY
WELLSON MODELS