


# Spitfire Mk XIV Peanut


by Gordon Roberts.

T

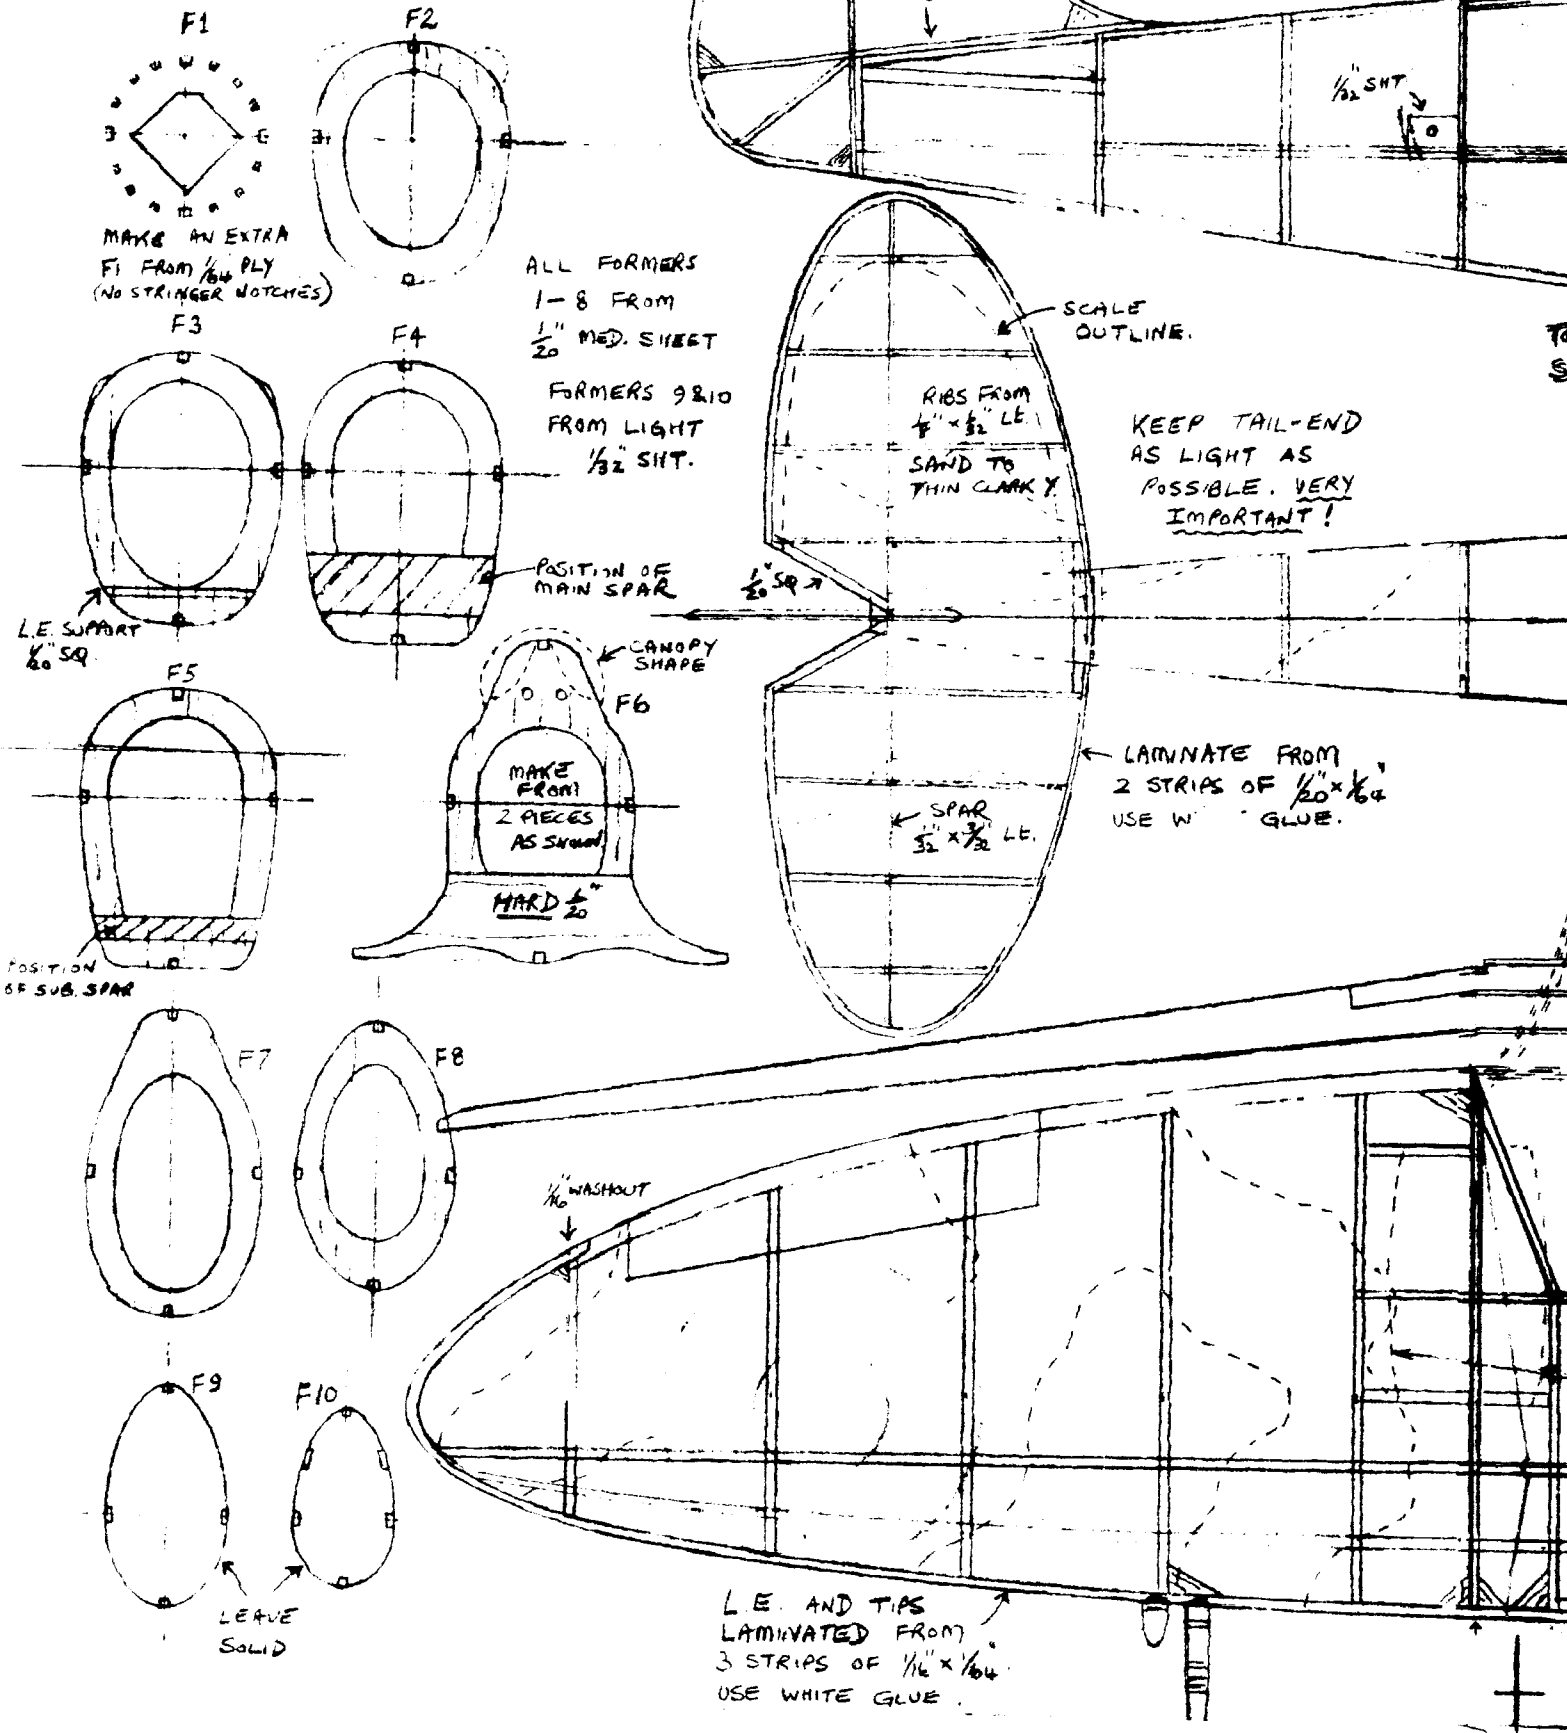


T

FUSELAGE :- JIG-BUILT UPSIDE DOWN. INSTALL PRE-BUILT WINGS, THEN PUT IN  $\frac{1}{32}$ " SQ. STRINGERS (3 PER QUARTER). PLATE IN FRONT SECTION BACK TO WING L.E. WITH VERY SOFT  $\frac{1}{32}$ " SHEET. YOU MAY WANT TO USE A FEW MORE STRINGERS TO DEVELOP THE UNDER-WING CURVE.

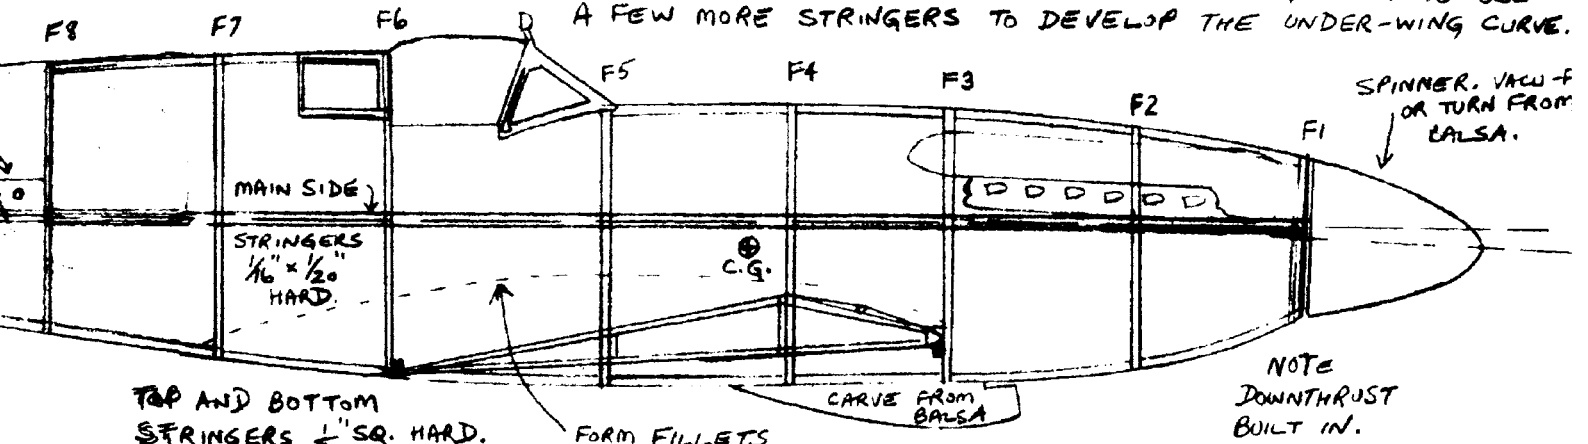

TOP AND BOTTOM STRINGERS  $\frac{1}{20}$ " SQ. HARD.

FORM FILLETS FROM THIN TYPING PAPER

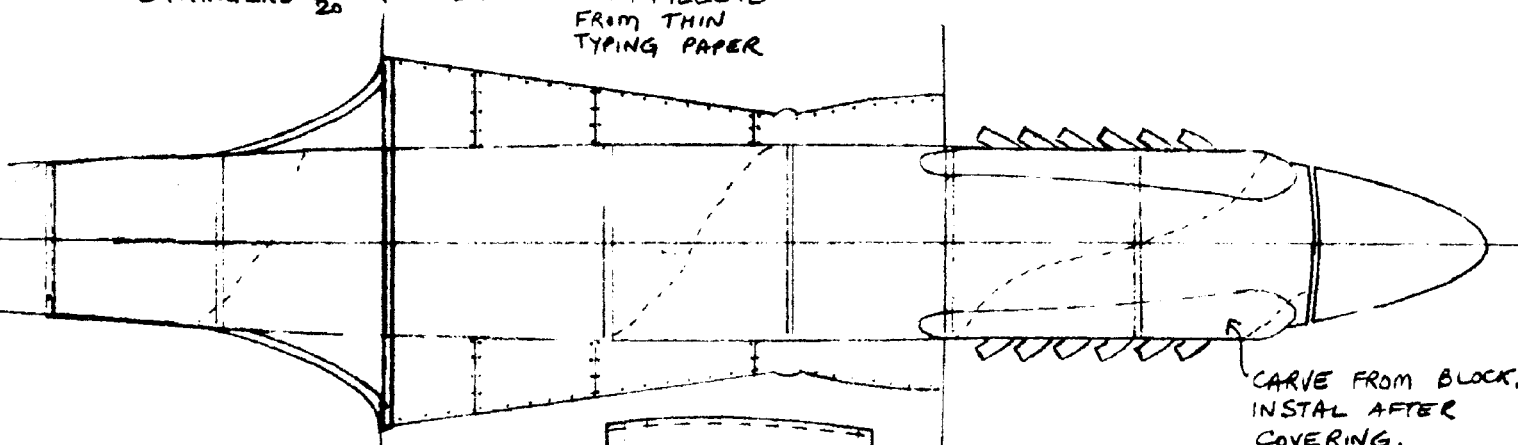

PROP. 6" PLASTIC, SCRAPE AND SANDED THIN AND BALANCED.  
 SHAFT 0.032" DIAM.  
 POWER 2 STRANDS  $\frac{1}{8}$ " FAI. 15" LONG.

