


Hole in Formers - servo or battery wire  
Make two sets of Formers from 3mm Correx with flutes biased 90 degrees

Sheet 1 of 2 (free plans)

53 in wingspan

Designed by Jim Beagle

CorroStang2 PSS Slope Plane

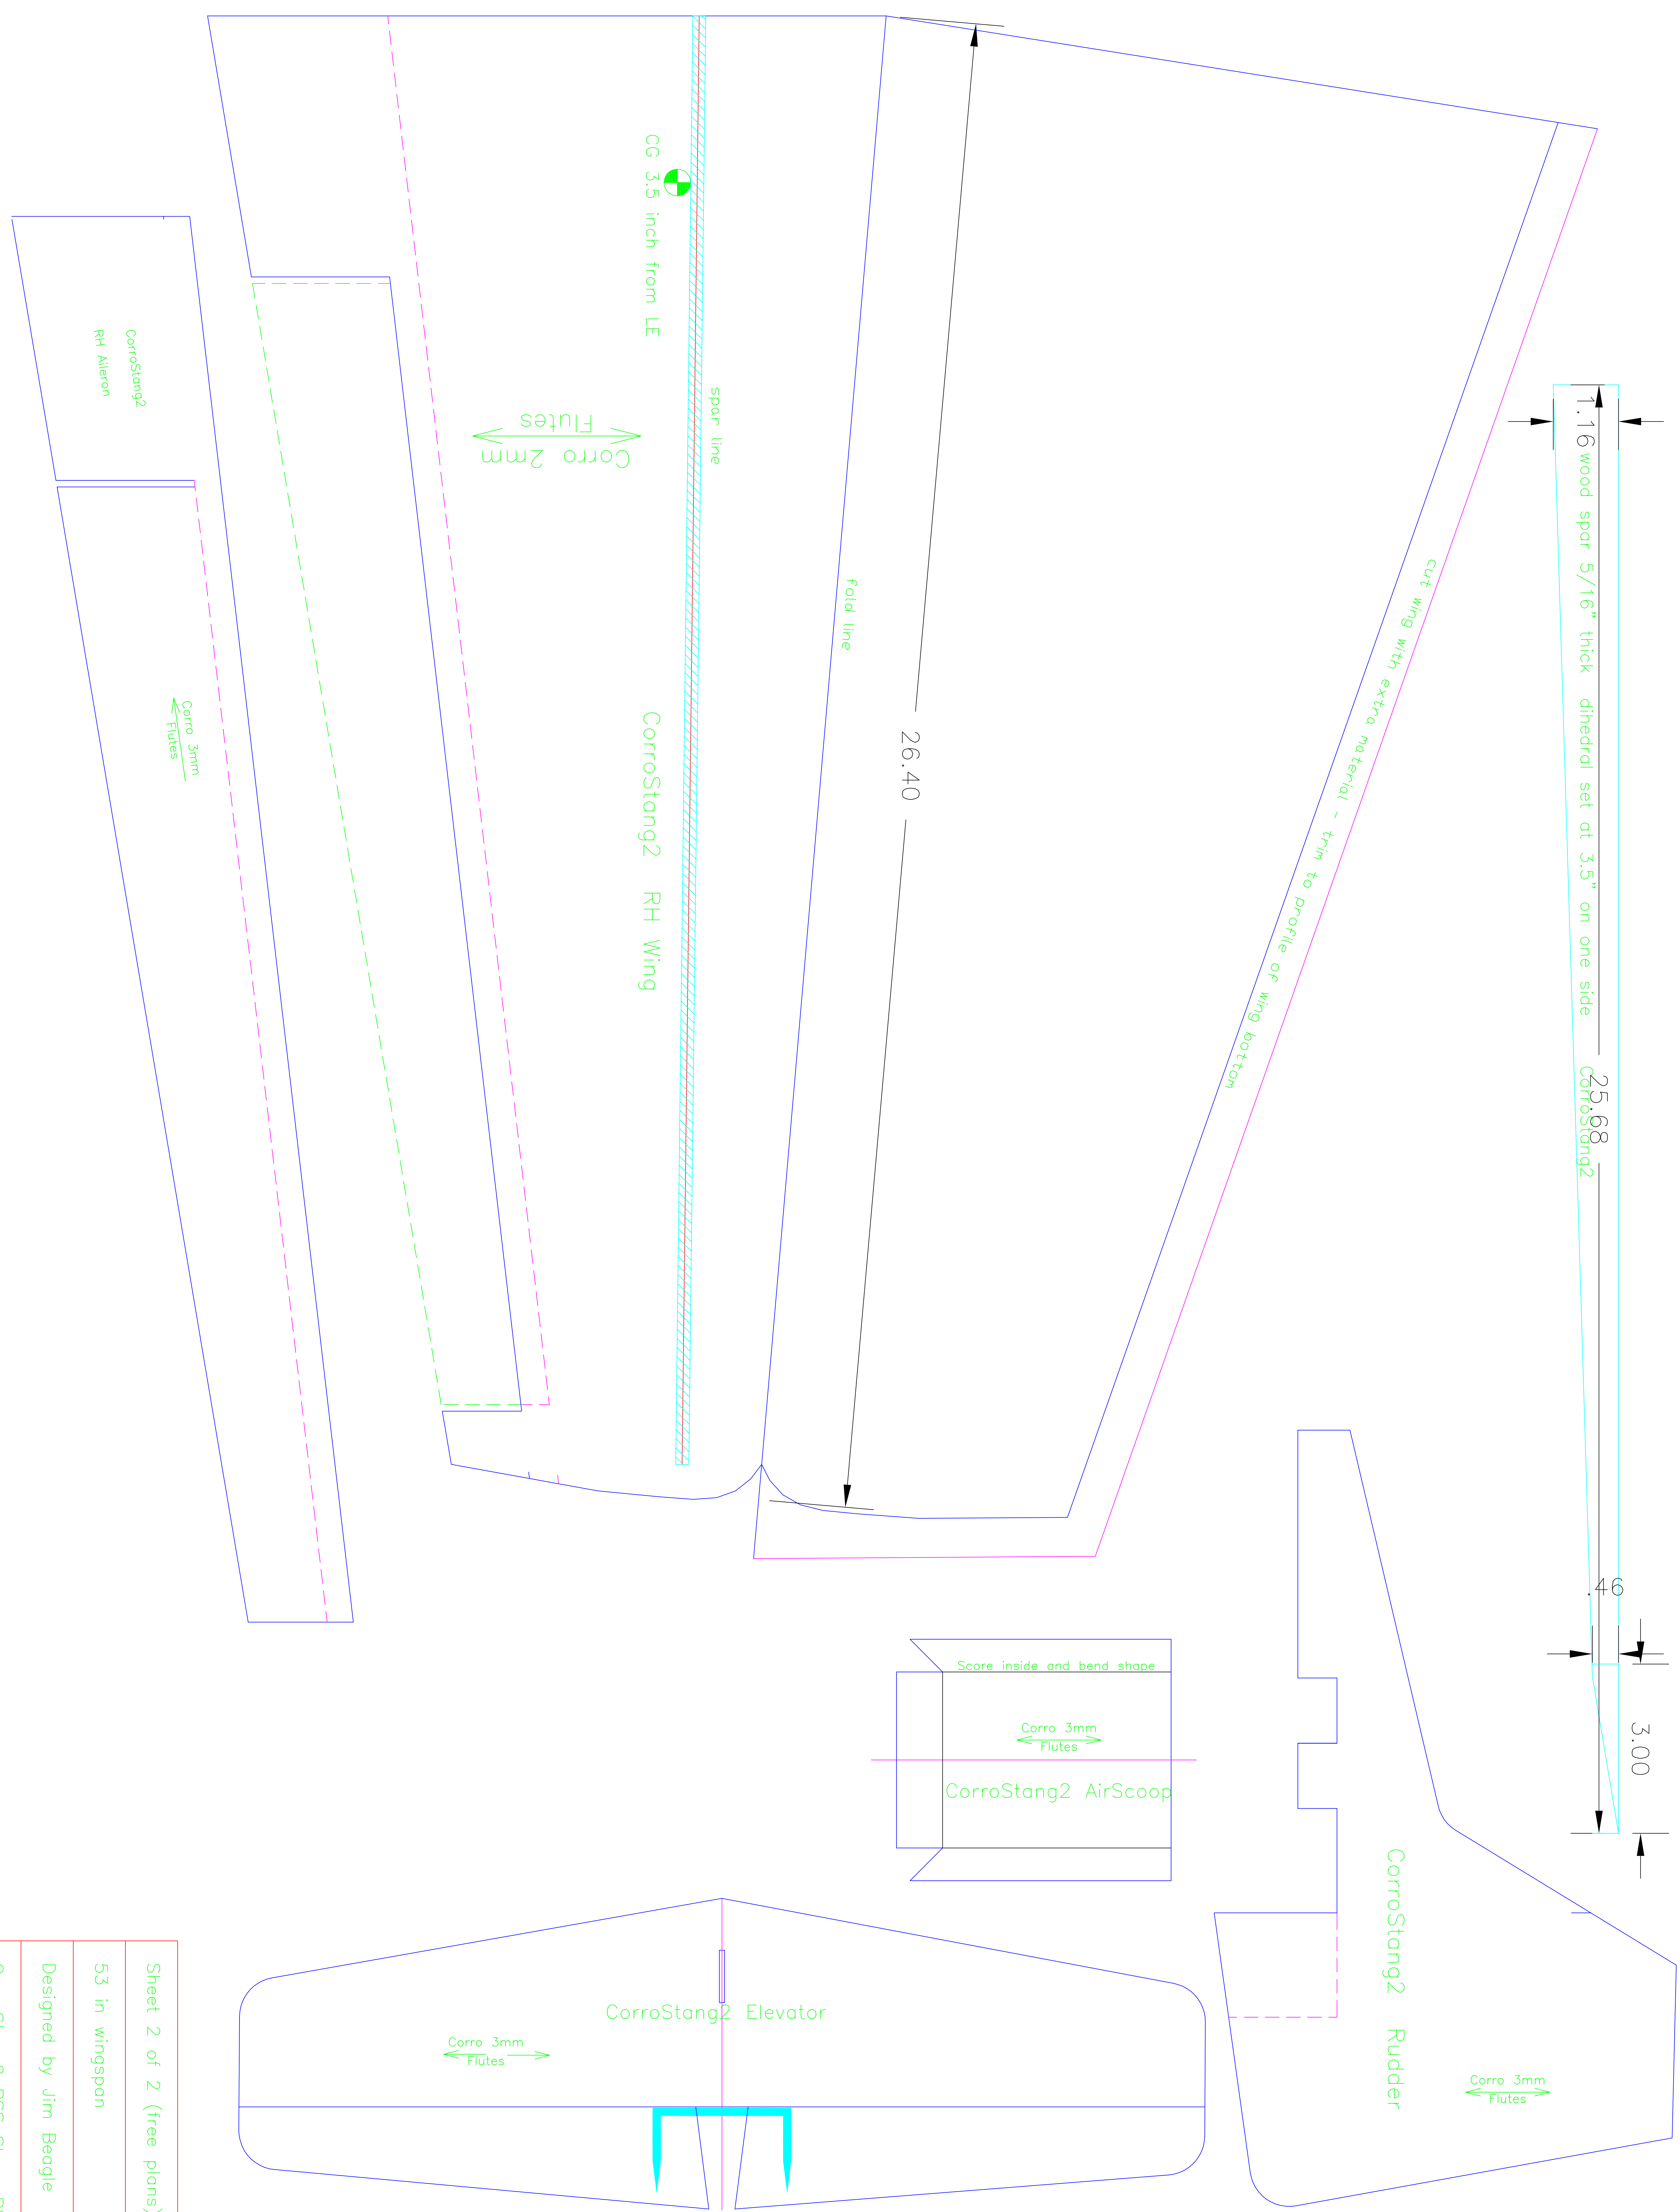

FILENAME: CorroStang\_30.dwg

Sheet 2 of 2 (free plans)
53 in wingspan
Designed by Jim Beagle
CorroStang2 PSS Slope Plane