


Make two sets of Formers from 3mm Correx with flutes biased 90 degrees
 Hole in Formers - diameter to match dowel rod during assembly

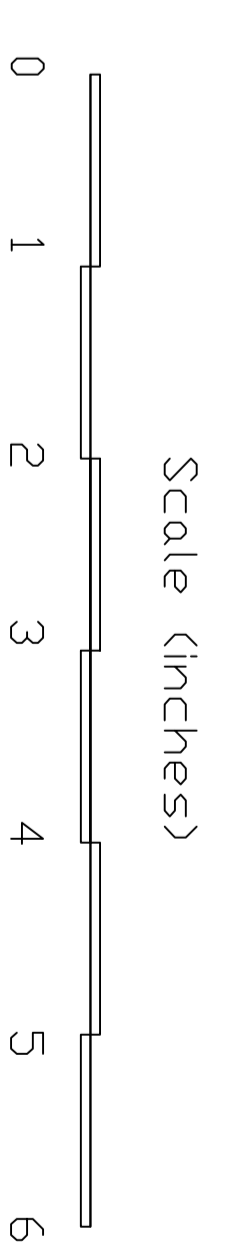

Plans must be plotted at 1:1 scale




FILENAME: U2c.dwg

Sheet 1 of 2 (free plans)


60 inch wingspan

Designed by Jim Beagle

U-2 Spy Plane PSS Sloper

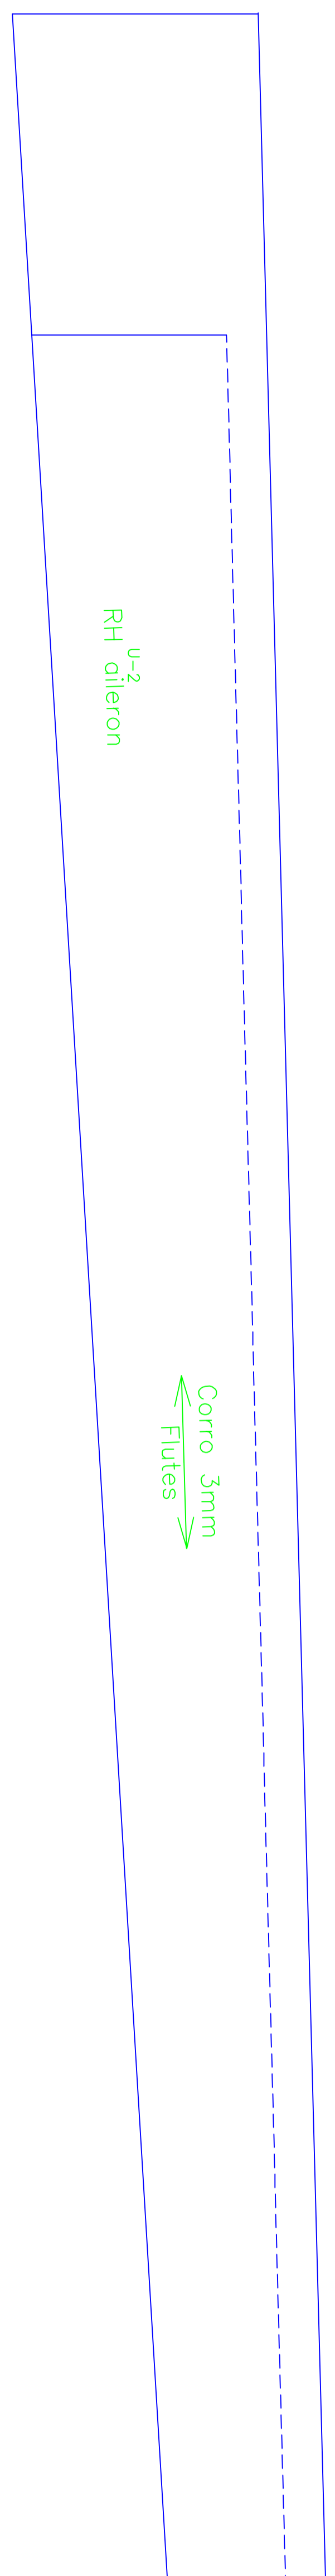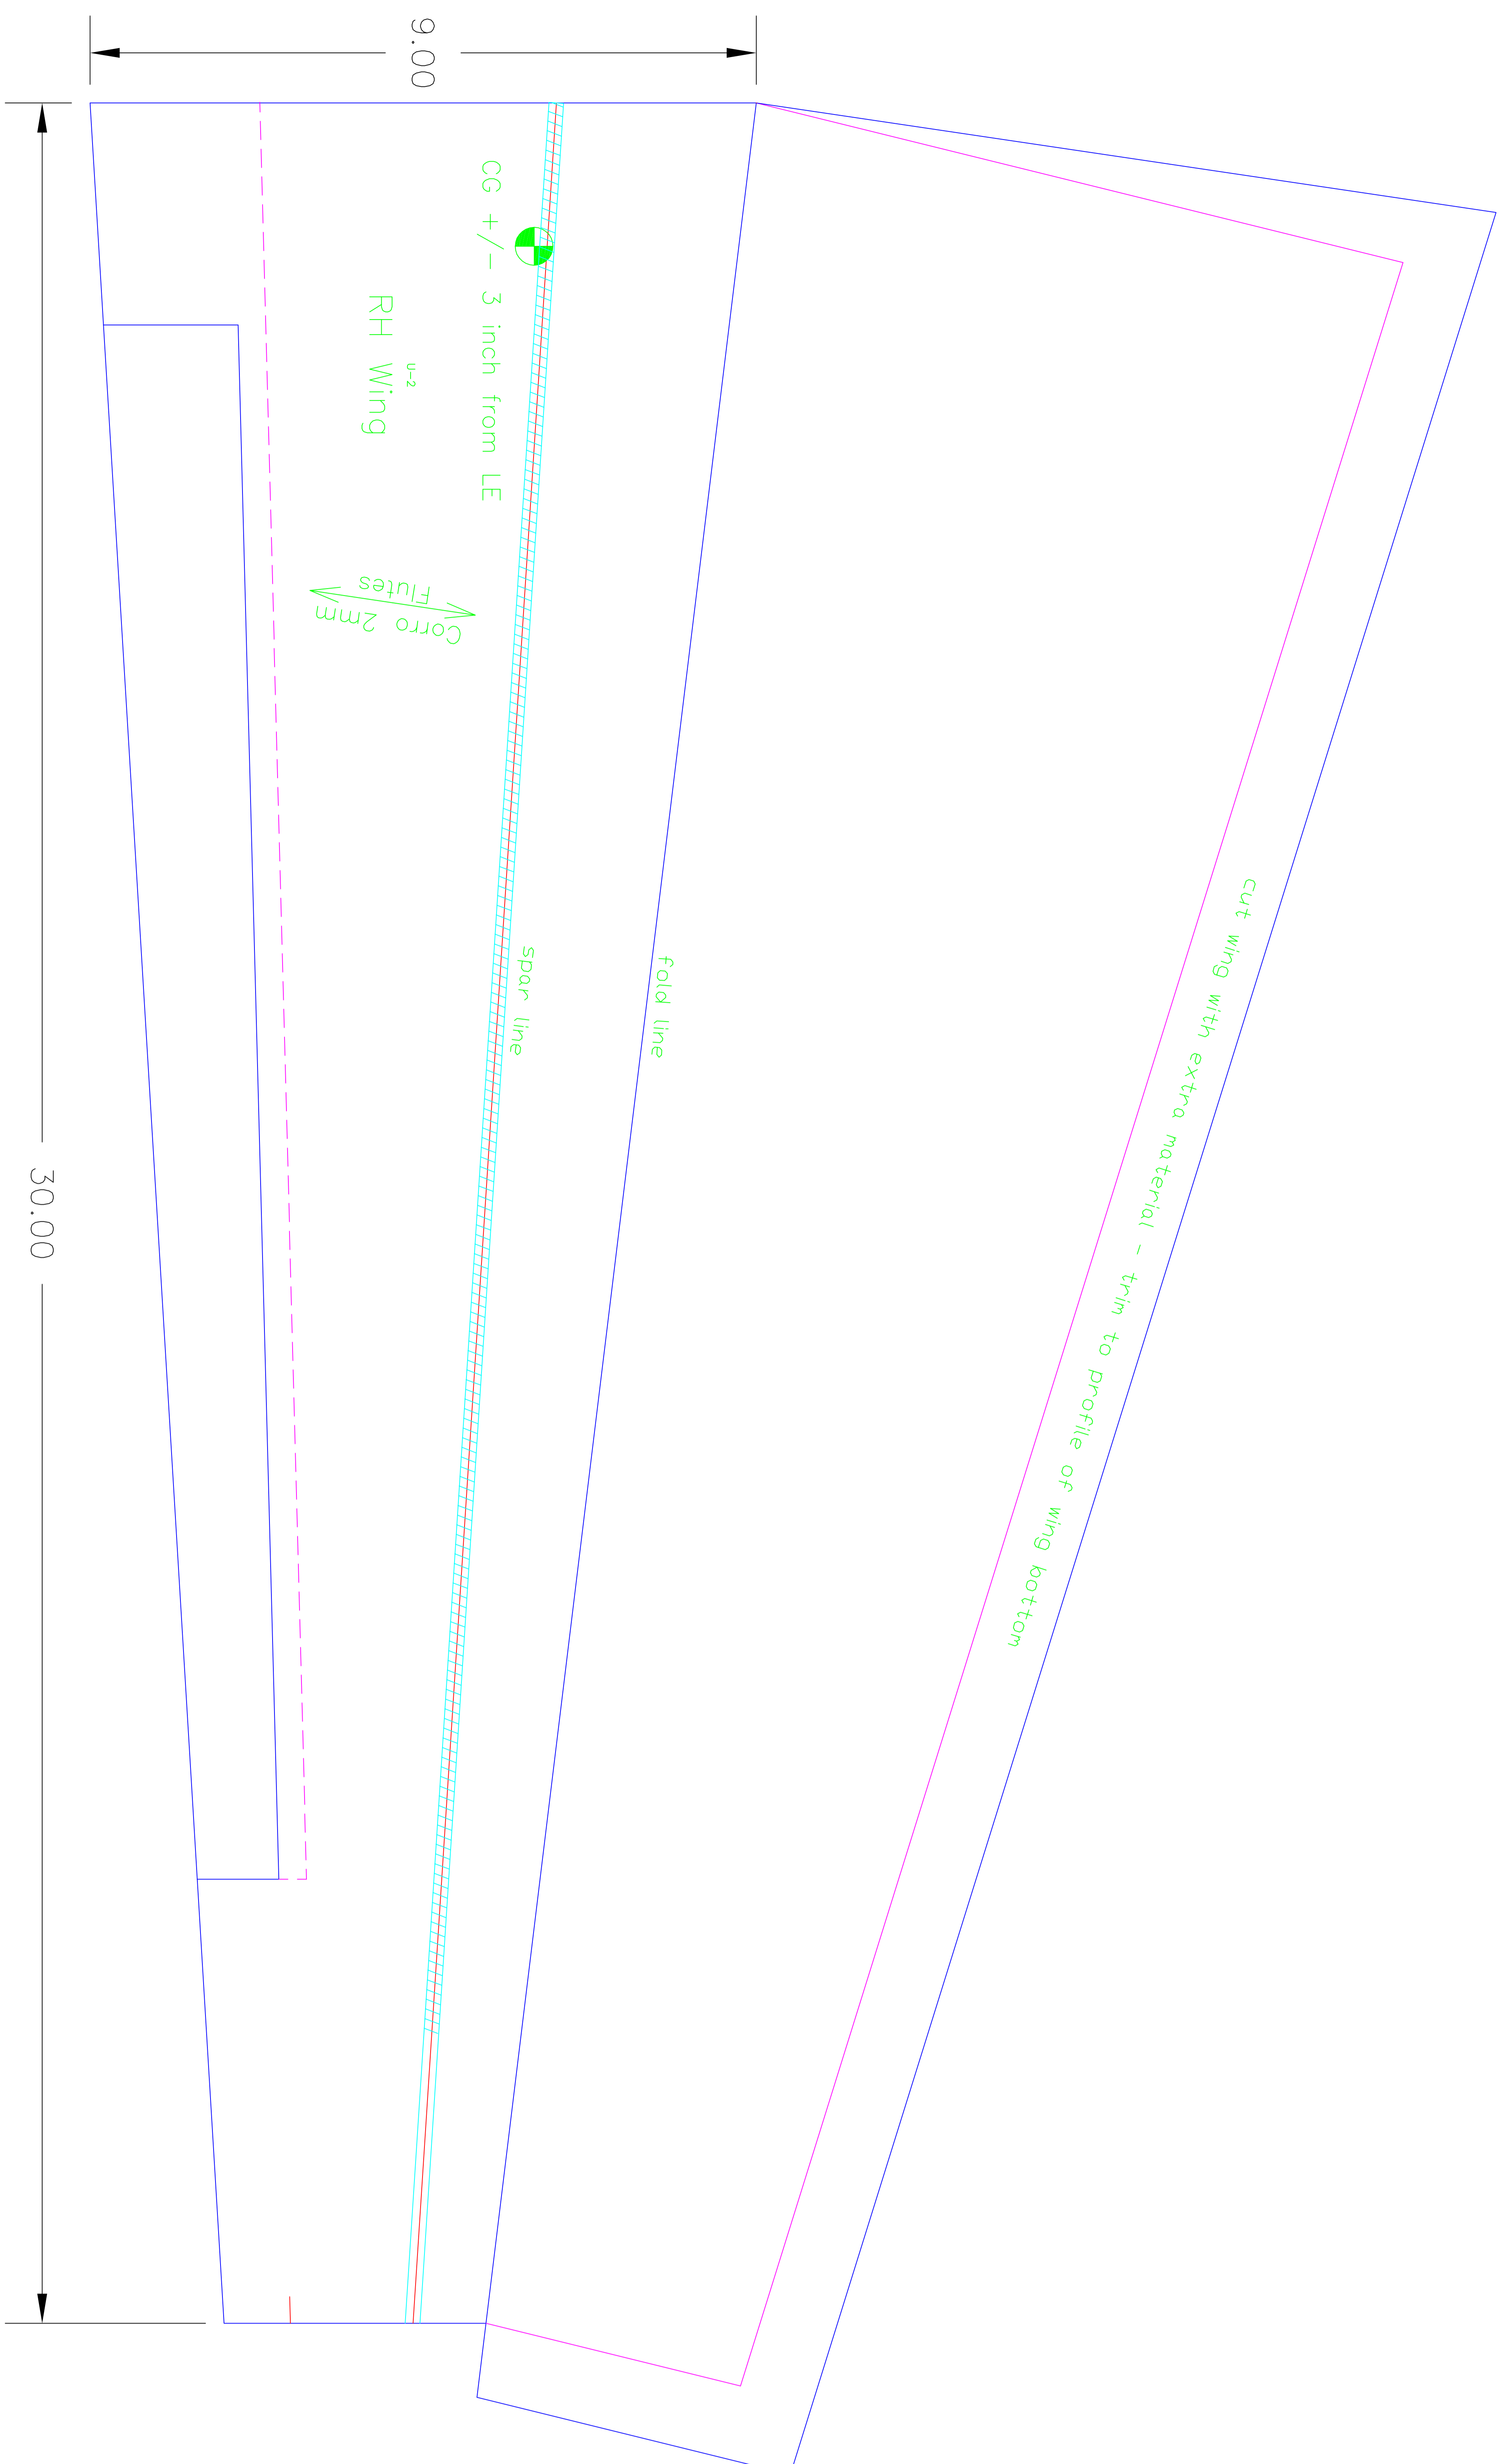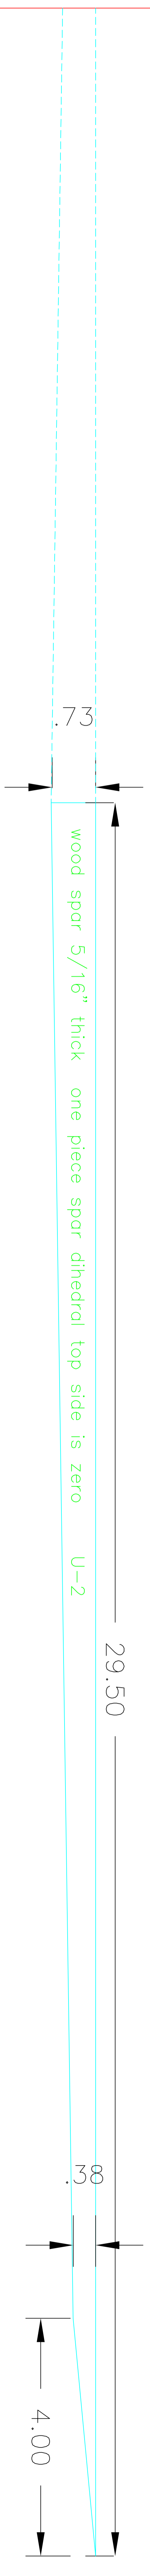

Plans must be plotted at 1:1 scale

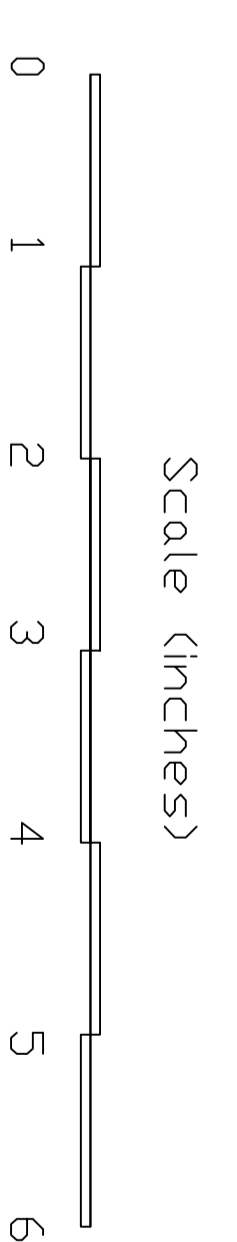

FILENAME: U2c.dwg

Sheet 2 of 2 (free plans)

60 inch wingspan

Designed by Jim Beagle

U-2 Spy Plane PSS Sloper