
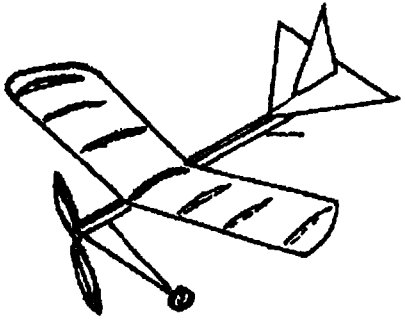





FIX WING TO STICK WITH RUBBER BAND

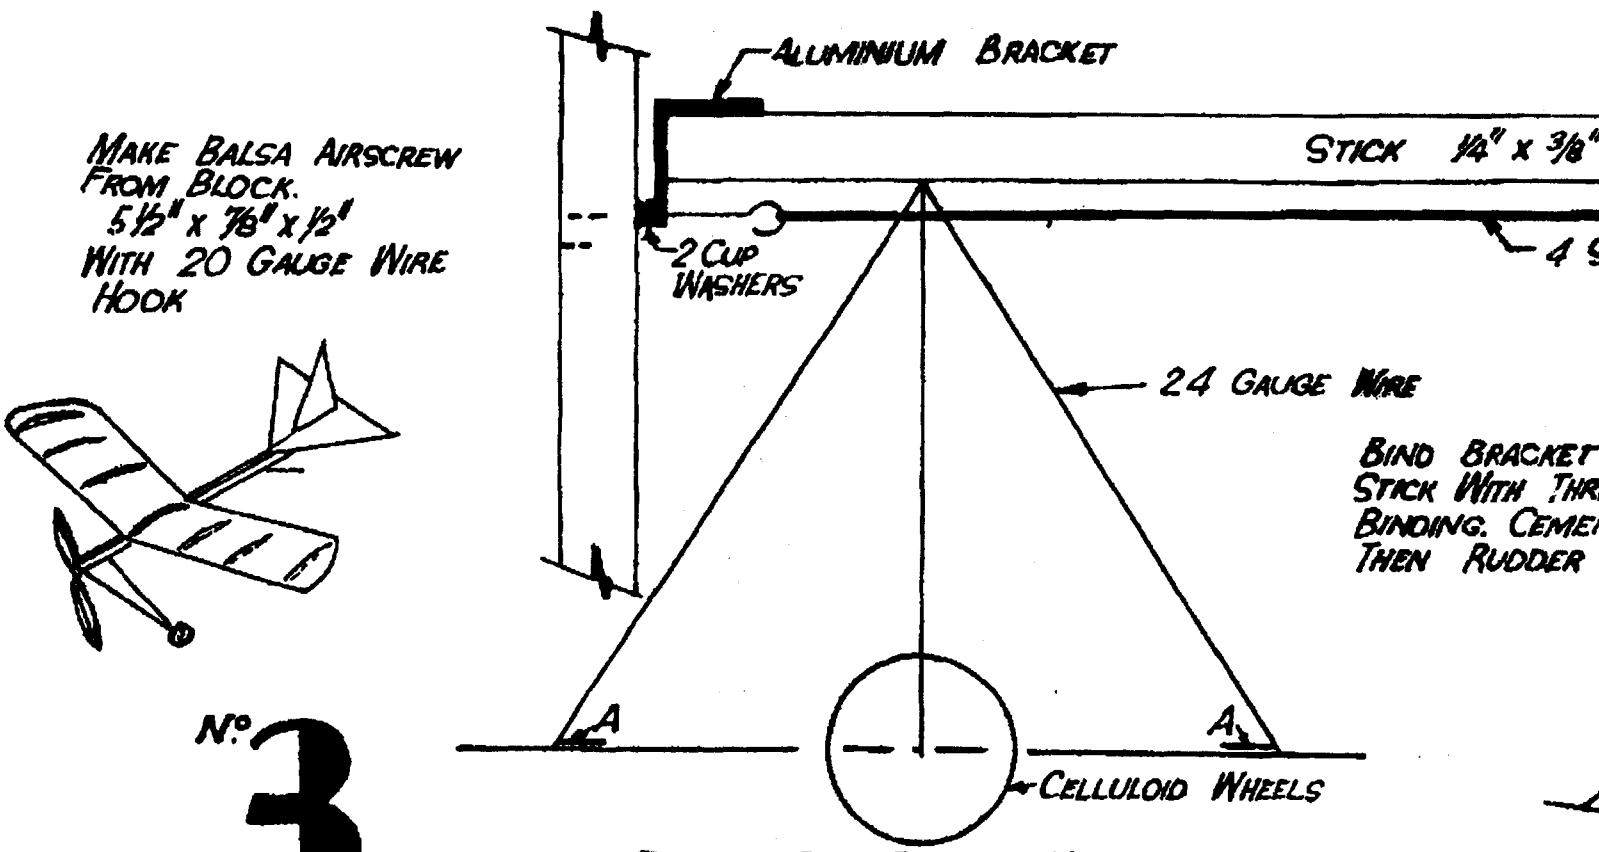

No. **3** MODEL.


FRONT & SIDE PLAN OF UNDERCARRIAGE  
 SOLDER JOINTS MARKED "A"

WALTHER & STEVENSON PTY. LTD. 395 GEORGE ST. SYDNEY

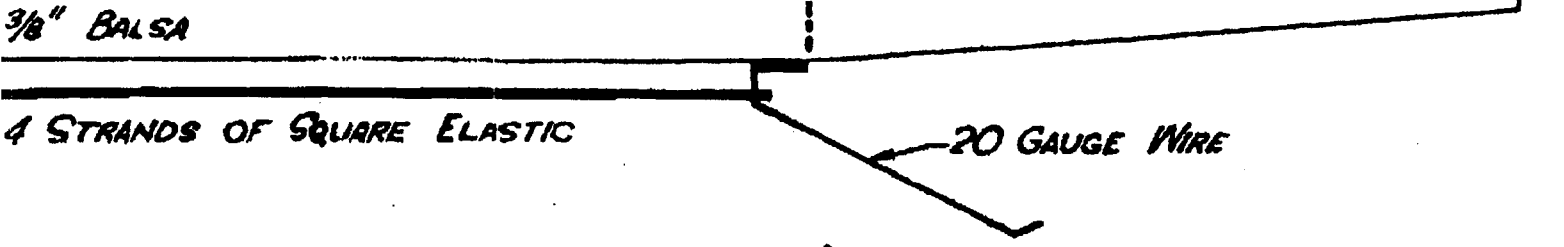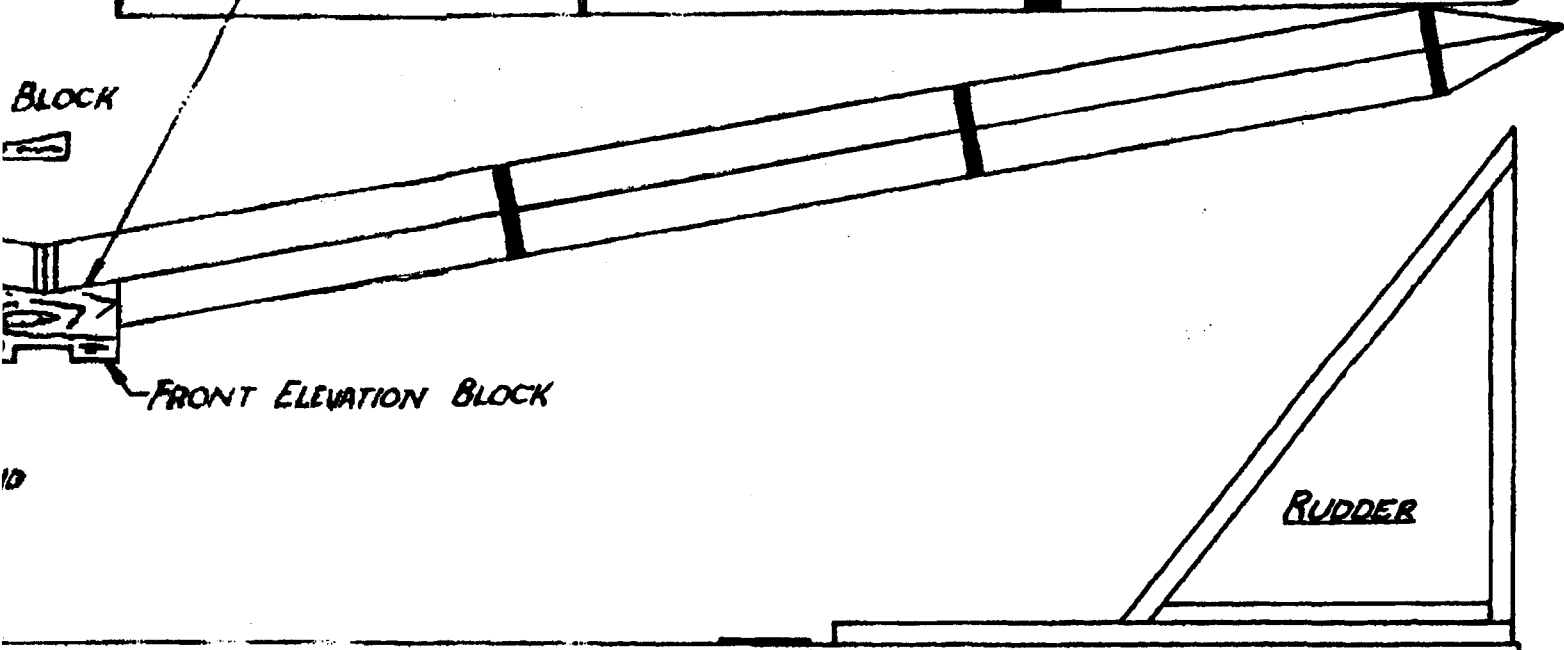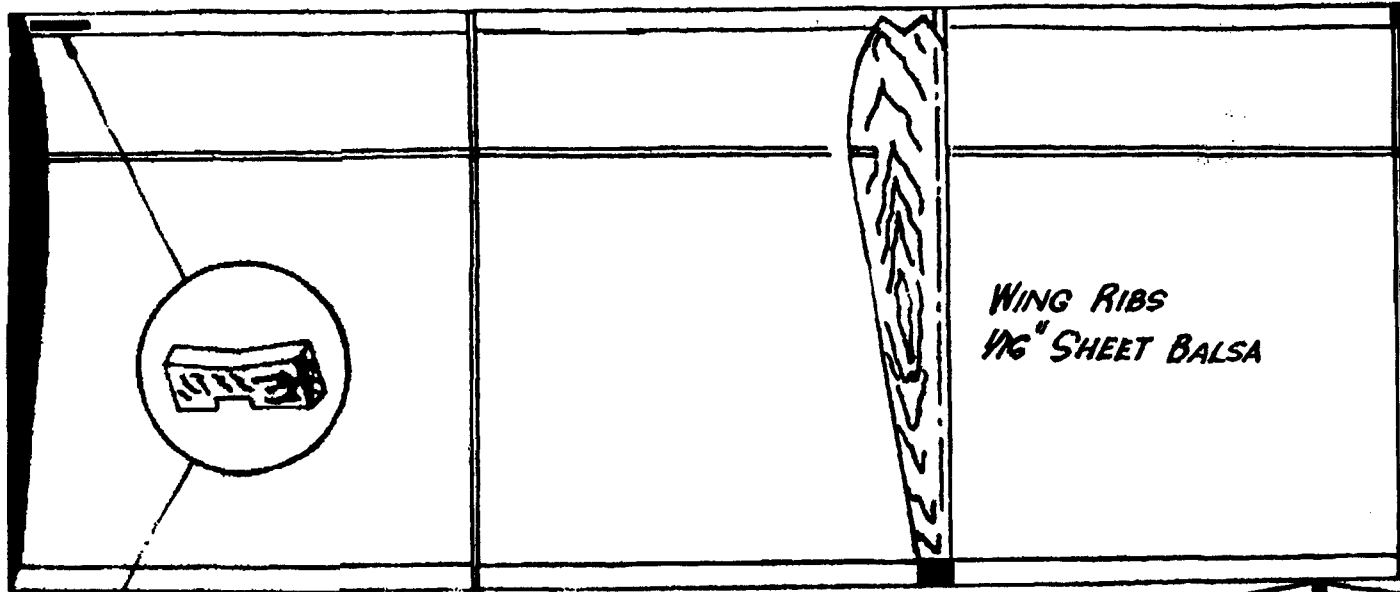

KEY & TAILSKID TO  
THREAD & CEMENT OVER  
CEMENT TAILPLANE TO STICK  
TO TAILPLANE

RUDDER AND TAIL PLANE  
MADE OF 1/8" x 1/8" Balsa  
COVER WITH TISSUE AND  
"DOPE" TO STRENGTHEN  
AND TIGHTEN THEM.

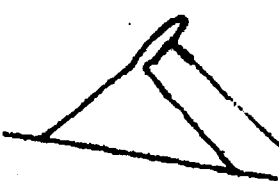

TAIL  
MAKE LOOP ON THE  
UNDERCARRIAGE AS SHOWN  
TO BIND AND CEMENT  
TO STICK.

FOR  
BEGINNER  
BUILDERS

PLANE

IVOR F

USE "WALTHER" CEMENT.

SYDNEY.

K.C.B.