


BELLY SCOOP FROM 1/16" Balsa Sheet

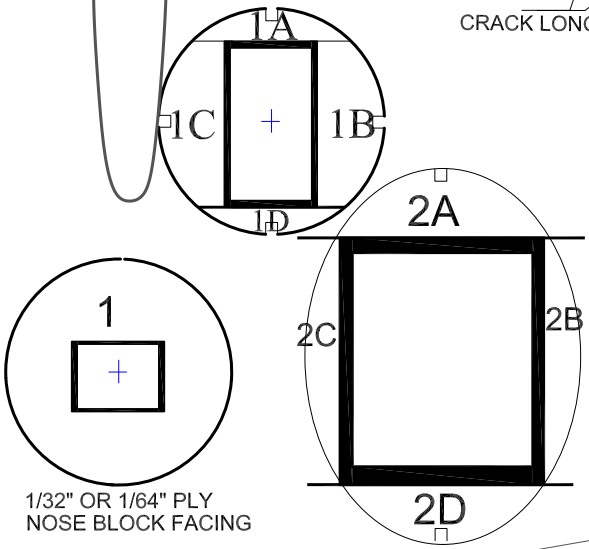

1/32" OR 1/64" PLY NOSE BLOCK FACING

FLAP MARKINGS ON BOTTOM OF WING ONLY

4B
1/16" BAMBOO OR REED
WINGSCREEN FRAME
HEAT BENT

TIPS HEAT BENT BAMBOO

FUSELAGE SIDES FLAT FROM #5 TO TAIL

CG STARTING POINT

CRACK LONGERONS HERE