T14

T13

T12

T11

T10

WHEEL COVER

T5

Note - Patterns given here are for tracing only - DO NOT cut out - read directions carefully.

T1

T9

T8

T3

T6

SPINNER

WHEEL COVER

T20

T2

T4

T21

T19

T7

TISSUE PATTERN SHEET NO.1

Top of Right Wing Tip

Top of Left Wing Tip

T18

T16

T15

T17

RIGHT SIDE OF RUDDER

LEFT SIDE OF RUDDER

Top of Left Stabilizer Half

Top of Right Stabilizer Half

NO.H23

24" VULTEE VANGUARD

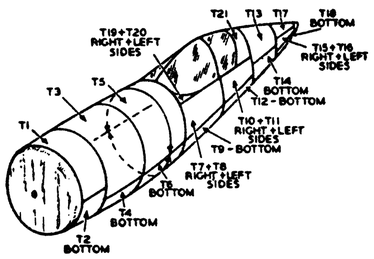

NO.H23

24" VULTEE VANGUARD

TISSUE KEY

DIRECTIONS

Keep glossy side of tissue next to paper. Grain of tissue should go in direction of the arrows.

Tack sheet of tissue over this layout and trace patterns lightly on tissue with a soft lead pencil. Remove tissue from over layout and cut out the traced patterns only when needed. (If you cut out all the patterns at once it will be difficult to identify them - by cutting as needed location of desired pieces of tissue can be found by referring to this layout.) Complete the broken patterns and make any extra patterns required.