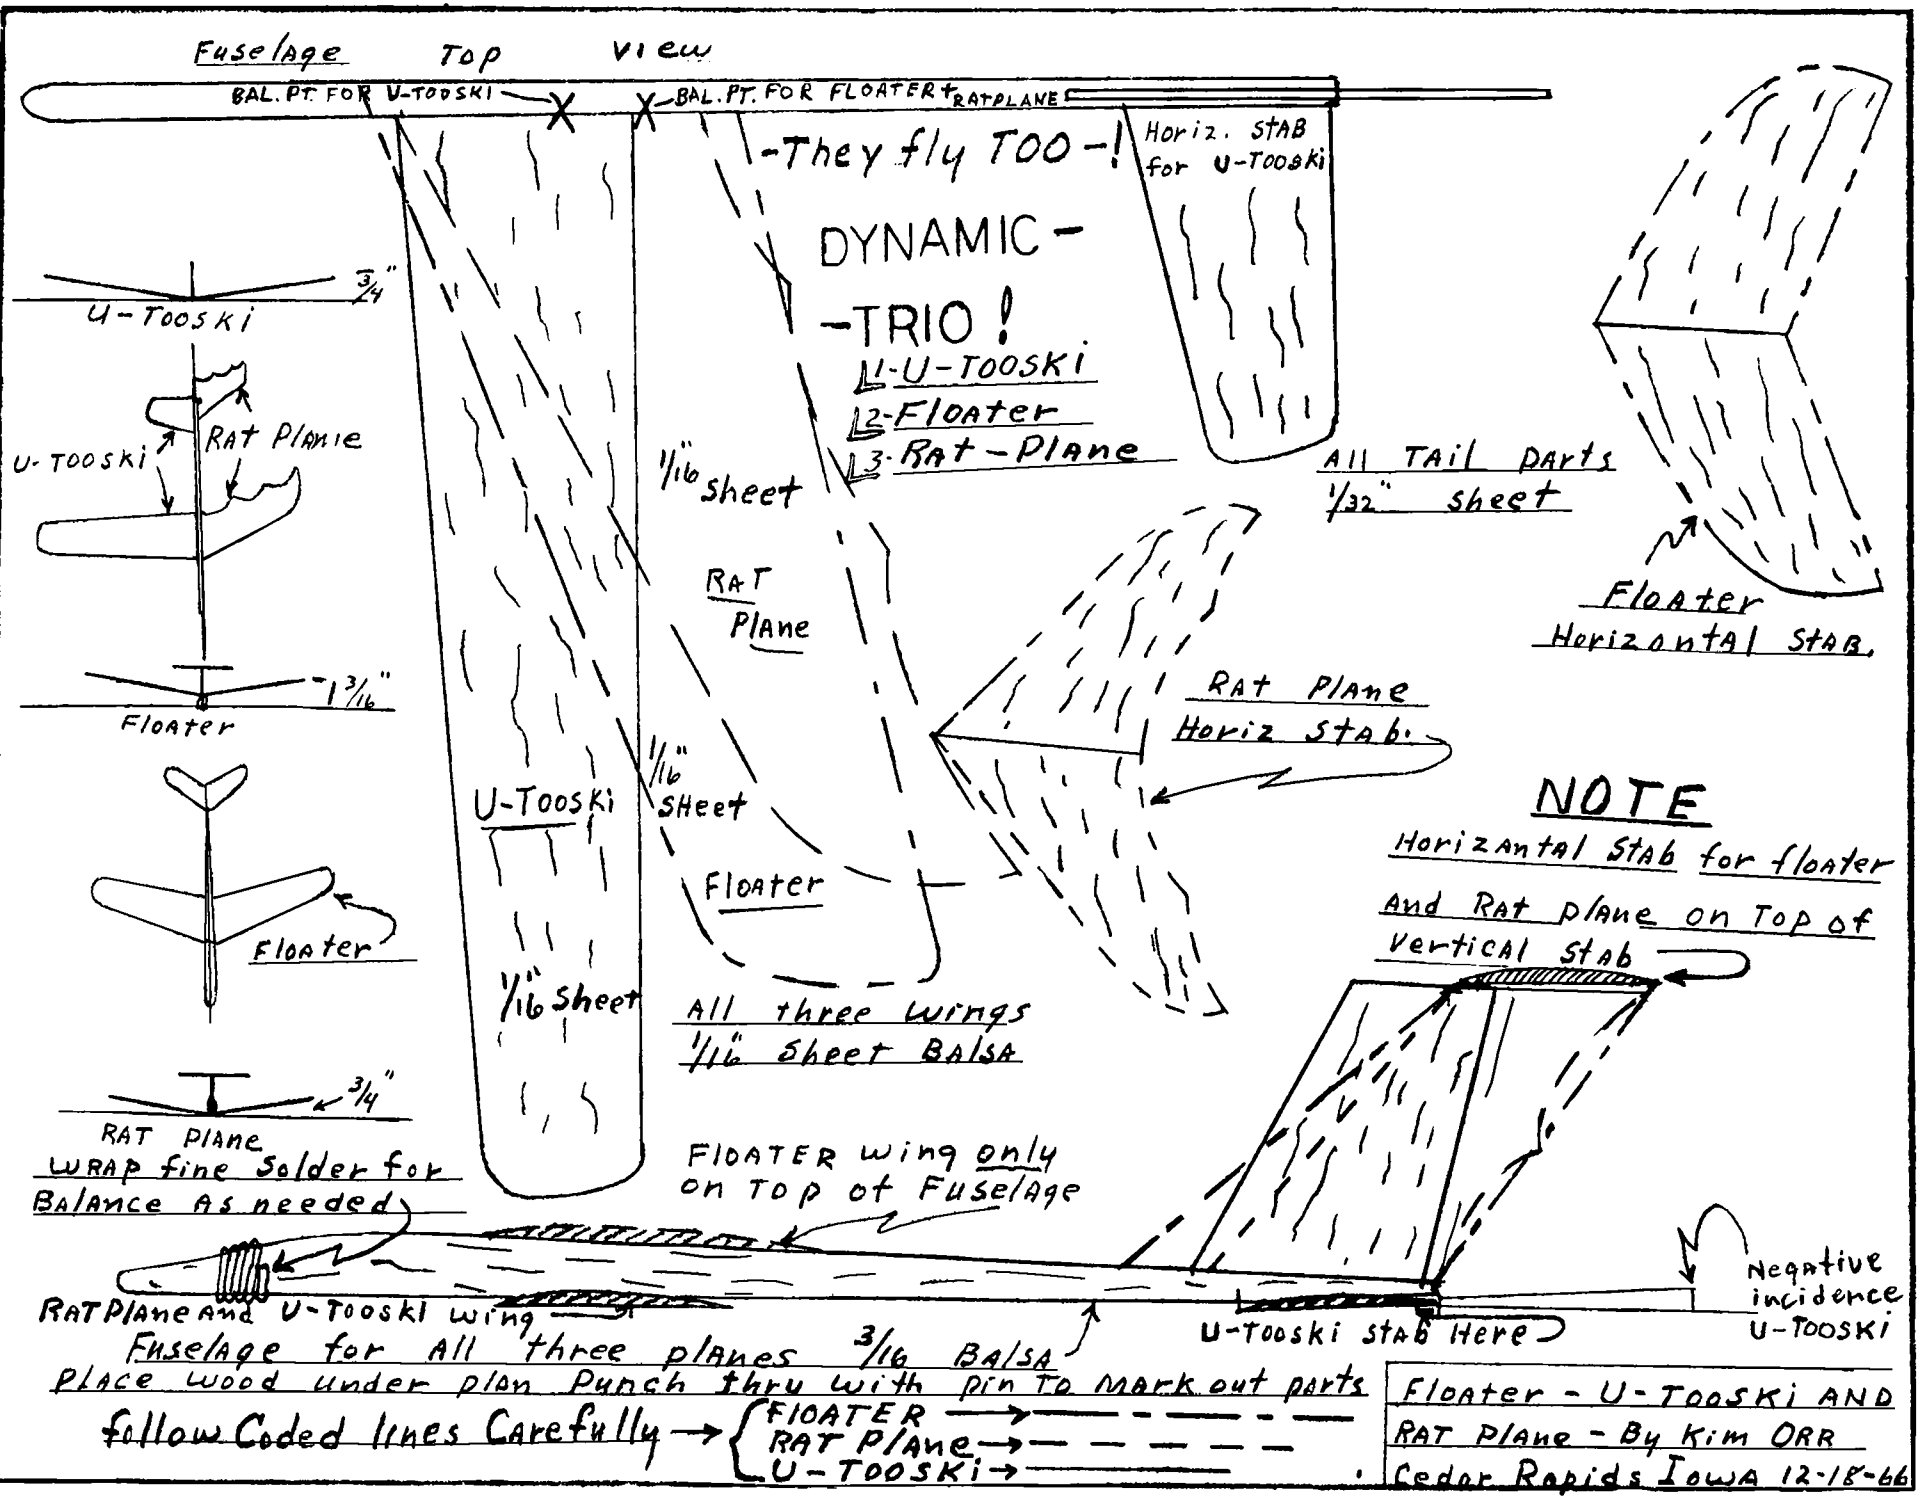
Fuselage Top View
BAL. PT. FOR U-TOOSKI
BAL. PT. FOR FLOATER + RATPLANE
-They fly TOO-!
DYNAMIC-TRIO!
1-U-TOOSKI
2-FLOATER
3-RAT-PLANE
Horiz. STAB for U-TOOSKI
All TAIL PARTS 1/32" sheet
Floater Horizontal STAB.
3/4"
U-TOOSKI
U-TOOSKI
RAT PLANE
1 3/16"
FLOATER
1/16 Sheet
RAT PLANE
1/16" SHEET
FLOATER
U-TOOSKI
1/16 Sheet
RAT PLANE Horiz STAB.
NOTE
Horizantal STAB for floater
And RAT plane on Top of
Vertical STAB
All three wings 1/16 Sheet BALSA
3/4"
RAT PLANE
WRAP fine Solder for
BALANCE AS needed
FLOATER wing only on TOP of Fuselage
RAT PLANE AND U-TOOSKI wing
Negative incidence U-TOOSKI
U-TOOSKI STAB Here
Fuselage for All three planes 3/16 BALSA
Place wood under plan Punch thru with pin TO MARK out parts
follow Coded lines Carefully →
FLOATER
RAT PLANE
U-TOOSKI
FLOATER - U-TOOSKI AND
RAT PLANE - By Kim ORR
Cedar Rapids IOWA 12-18-66